8 ISSUES AND 1 RECEIPT OF FIXED FEEDBACK

Product instructions

- Please be sure to read this instruction manual carefully before use in order to use the product correctly.
- After reading, please keep the instructions in a safe place.


Product Application

This product can be set according to the user to open and close the power supply of various electric equipment. The control object can be street lights, neon lights, advertising sign lights, production equipment, Motor, pump equipment and all other electrical equipment and household appliances.
In addition, this product supports customized service, if necessary, please contact customer service!


Product Parameters

- Device Model: HK15-IOMC0088
- Resolution： 0.01mA;
- Response time : <5s;
- Indication mode : LCD Chinese display;
- Output standard signal: 8-channel relay output RS485 bus (Modbus-RTU) and wireless signals
- Working mode: rail mounting, continuous work
- Use of the environment: -10 ℃ ~ 50 ℃
- Relative humidity: ≤95%
- Working voltage: AC220V±15% 50Hz±1% (optional)
- Transmission distance: 5000 meters
- Power consumption: <8W


Product function

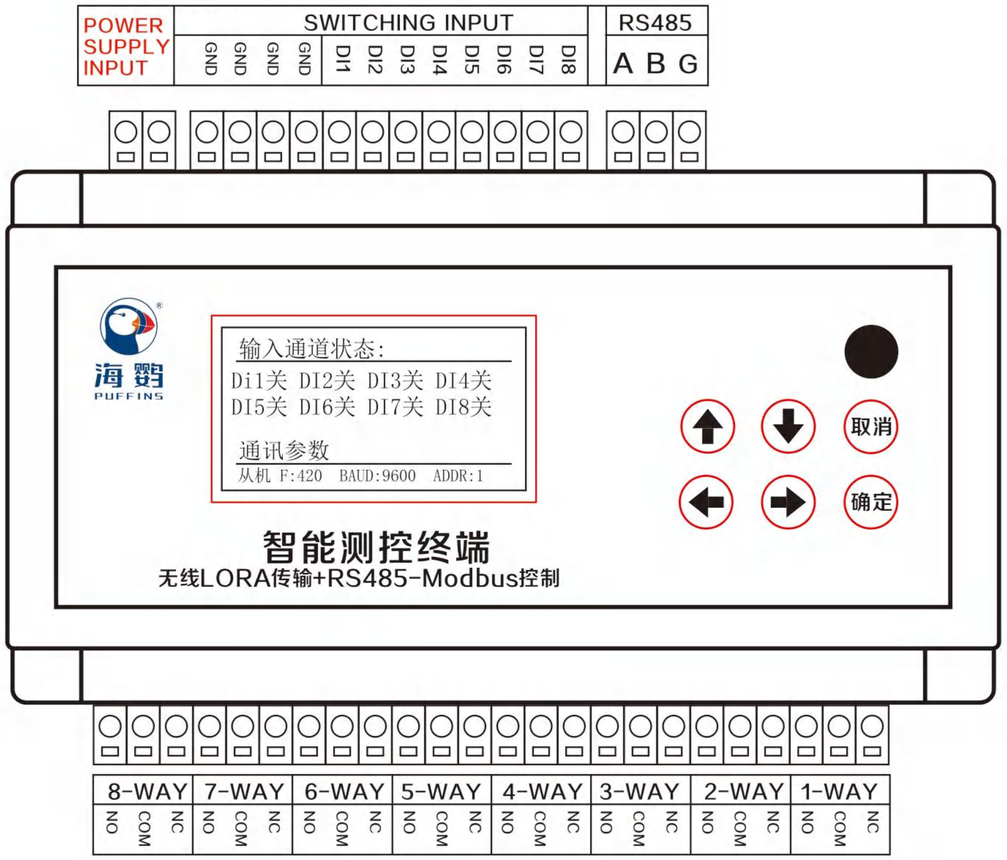

Product function

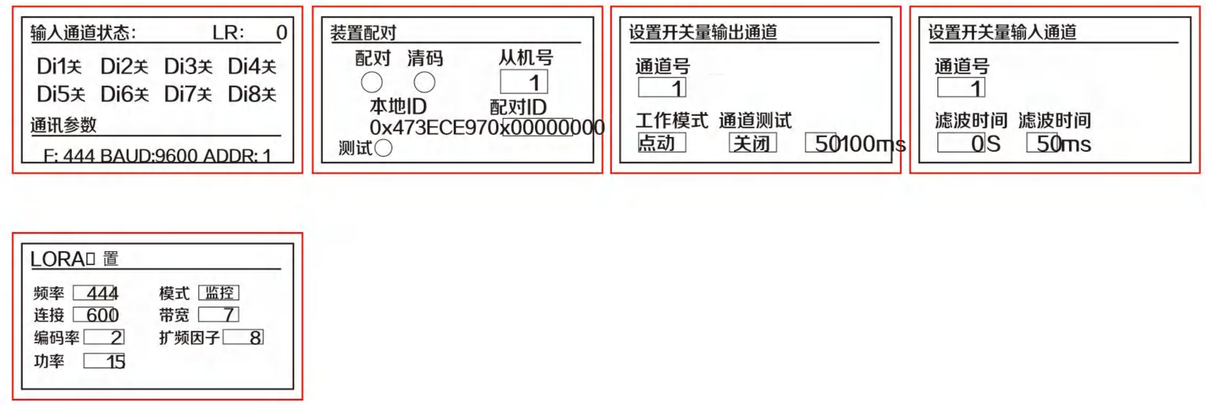


Function Menu

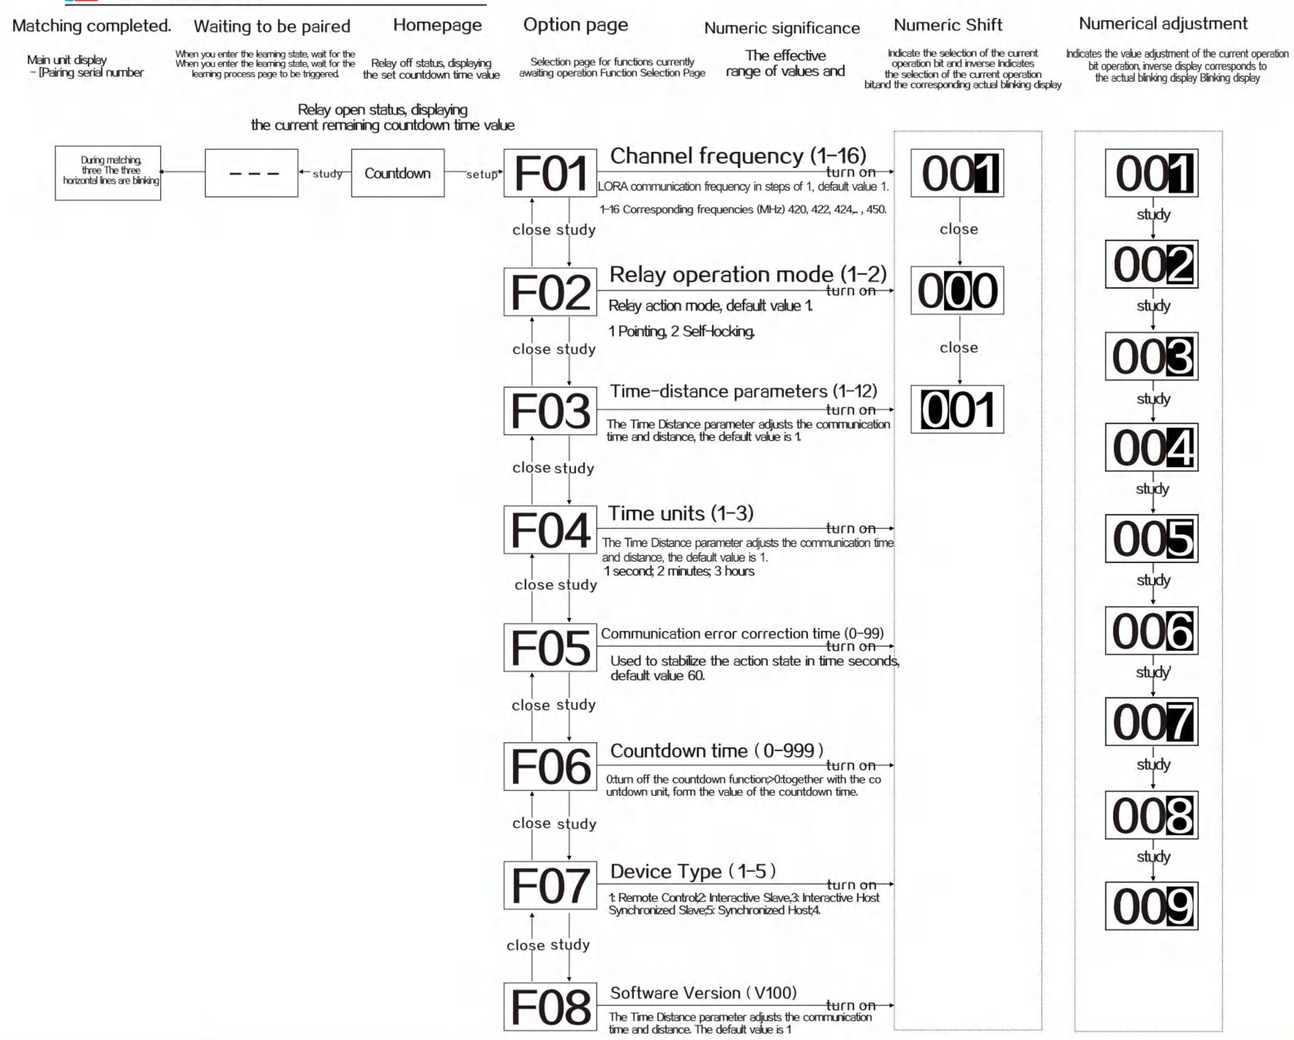

Service Hotline: 15537119097 (with WeChat)

8 ISSUES AND 1 RECEIPT OF FIXED FEEDBACK

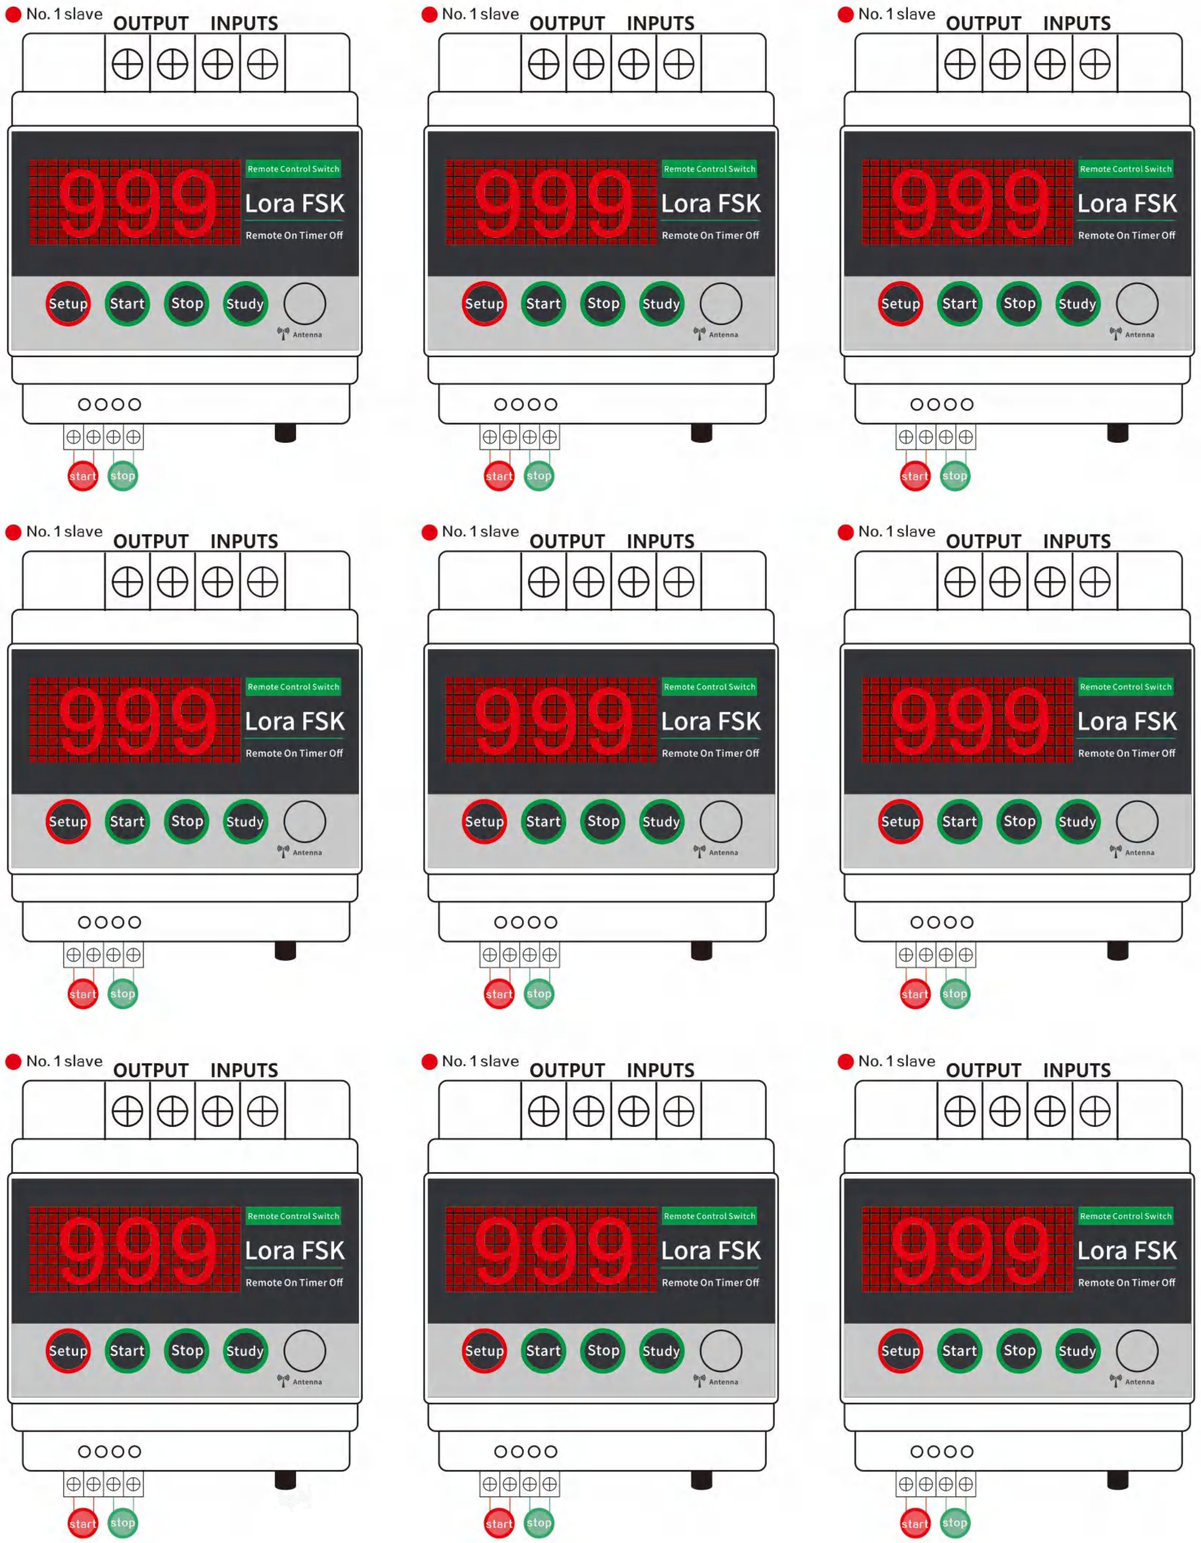

◆Switching input and output function

The device has 8 switching inputs and 8 switching outputs. After successful pairing, the switching outputs of the two paired devices follow the state of each other's switching inputs. That is: If one of the paired devices' switching input 1 channel is closed, then the other device's switching output 1 channel is closed, and if one device's switching input 1 channel is disconnected, the other device's switching output 1 channel is also disconnected. switching input 1 channel of one device is closed, and the switching output 1 channel of the other device is also closed.

Serial No.	Functions	备注
1	Read switching input status	
2	Read switching output status	
3	Setting switching output status [open, close, close after a period of time].	
4	Modify modbus-RTU communication address [effective in real time].	
5	Modify modbus-RTU communication baud rate [in real time].	
6	Modify LORA transmit frequency [in real time].	
7	Modify LORA receive frequency [Real-time effect].	
8	Add LORA to be paired device ID [effective in real time].	
9	Clear LORA pending pairing device ID [effective in real time].	

◆Common faults that are dealt with

It is recommended that the unit's channels be calibrated every six months.

Malfunction	Reason	Treatment
Data display abnormality	Unmatched	Calibrate the corresponding channel and pairing device.
Abnormal communication	Parameter settings do not match	Adjust the parameters of the host computer and the device to be the same.
not shown	Power supply mismatch	Specify the power supply parameters in the instruction manual.
If the problem still can't be solved, please contact the seller or our company, and inform the product model and the details of the trouble.		

When the control output is active (AC220V), cut off the power supply before tightening the terminals.

Warning: When the control output is active (AC380V), disconnect the power supply before tightening the terminals.

Warning: When the control output is active (DC9-30V), cut off the power supply before tightening the terminals.

Service Hotline: 15537119097 (with WeChat)